

**O W N E R ' S  
M A N U A L**

**RM6700**SYSTEM

---

**RM2350**SATELLITES

**RM2650**CENTER CHANNEL

**Big Speaker Sound Without The Big Speaker®**

**polk**audio  
the speaker specialists®

## GETTING STARTED

The RM6700 5-Pack carton should contain the following items:

- Four (4) magnetically shielded satellite speakers
- One (1) magnetically shielded center channel speaker
- This manual and other printed materials
- Rubber adhesive pads

The RM2350 carton should contain the following items:

- Two (2) magnetically shielded satellite speakers
- This manual and other printed materials
- Rubber adhesive pads

The RM2650 carton should contain the following items:

- One (1) magnetically shielded center channel speaker
- This manual and other printed materials
- Rubber adhesive pads

## SPEAKER PLACEMENT

CENTER CHANNEL SPEAKER (*Figures A & B*)

Place the center speaker as close to the TV as possible. The most popular placement is right on top of your TV set. It is also fine to place it below the TV or on the wall directly above the TV. (Use the built-in keyhole slots or an optional wall mounting bracket such as the OmniMount 25RST, available at your Polk Audio dealer or in the Polk Webstore at <http://shop.polkaudio.com>. Insert the bracket into the threaded insert on the rear of the RM2650 Center Channel Speaker.)

FRONT SPEAKERS (*Figures A & B*)

Place the front satellites about as far apart as you are sitting from them. Avoid placing them less than 2 feet from side walls. Place them at or near your ear level. If you choose to wall mount them, use the built-in keyhole slot or an optional wall mounting bracket such as the OmniMount 25RST. OmniMount Brackets are available at your Polk Audio dealer or in the Polk Webstore at <http://shop.polkaudio.com>.

SURROUND SPEAKERS (*Figures A & C*)

The best placement for surround channel speakers is high on the side walls, facing each other and slightly behind your listening position. If this placement is not possible, the speakers may be placed on the rear wall. In either case, mount the speakers two to four feet above the seated listener's head using either the built-in keyhole slot or an optional wall mounting bracket such as the OmniMount 25RST. OmniMount Brackets are available at your Polk Audio dealer or in the Polk Webstore at <http://shop.polkaudio.com>.

SUBWOOFER (*Figures A, B & C*)

The subwoofer may be placed in an entertainment center, behind furniture or next to a sofa or chair. The subwoofer may be placed anywhere in the room but you will get the best performance when it is on the same side of the room as the front satellites and near a wall or corner. It may lie on its side, but placing it on its feet gives the best performance. NEVER LAY THE SUBWOOFER ON THE AMPLIFIER END—THIS WILL DAMAGE THE AMPLIFIER.

## WALL MOUNTING THE SATELLITE SPEAKERS (*Figures D & D1*)

RM2350 Satellite Speakers have two wall mounting options built right in. One is the Keyhole Slot built into the Power Port Bass Vent on the rear of the speaker, and the other is the Threaded Insert located directly below the Power Port Bass Vent.

Follow these directions to use the Keyhole Slot option:


- On-wall installation of RM speakers requires basic skills and basic tools (drill and screwdriver). If you are in doubt that you possess the necessary skills or tools, consult your Polk dealer or a professional installer. Otherwise, grab your tools and follow the steps below to safely secure the speakers to the location of your choice.
- Make sure the locations you have selected for wall-mounting do not conceal electrical wiring or plumbing.
- Hold the speaker in the chosen location to make certain it clears the ceiling, adjacent walls, corners, beams, lighting fixtures and door/window frames.
- If you are certain that there is a stud behind the wall surface, drive a #10 screw (not supplied) through the wall and into the stud leaving the screw head protruding 1/4" (6mm).
- If there is no stud behind the chosen location, install a #10 wall anchor (not supplied) into the wall by following the wall anchor manufacturer's directions, then insert a #10 screw (not supplied), leaving the screw head protruding 1/4" (6mm).
- For masonry walls, use a masonry drill bit and #10 masonry anchor and screw (not included).
- Line up the speaker so that the screw head passes through the large center hole of the keyhole slot. Let the speaker slide straight down, allowing the screw head to slip behind the smaller end of the keyhole slot. The Threaded Insert gives you more flexibility and choice of mounting location because you can use an optional fully articulating "ball and socket" type mounting bracket such as the OmniMount 25RST. Simply mount the bracket on the wall as per the manufacturer's instructions, and insert the threaded end of the articulating arm into the Threaded Insert on the rear of the RM2350. OmniMount brackets are available at your Polk Audio dealer or in the Polk Webstore at <http://shop.polkaudio.com>.

## CENTER CHANNEL WALL OR CEILING MOUNTING

Use the built-in keyhole slots or an optional, fully articulating "ball and socket" type mounting bracket, such as those made by OmniMount®, with the threaded insert on the rear of the speaker. When using the keyhole slots option follow the instructions above. When using an articulating bracket follow the manufacturers' instructions for installation.


### Speaker Placement

 Figure A

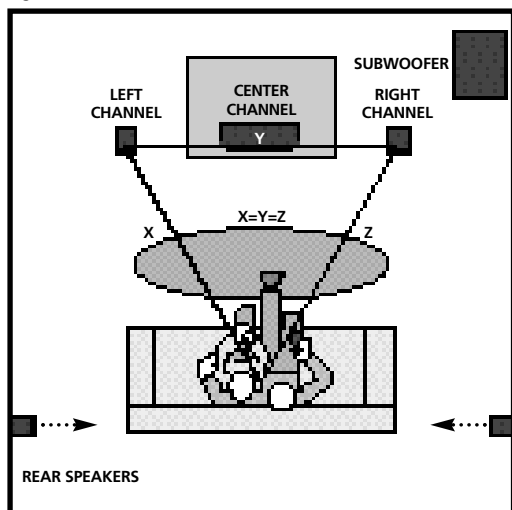


### Mounting Options

 Figure D

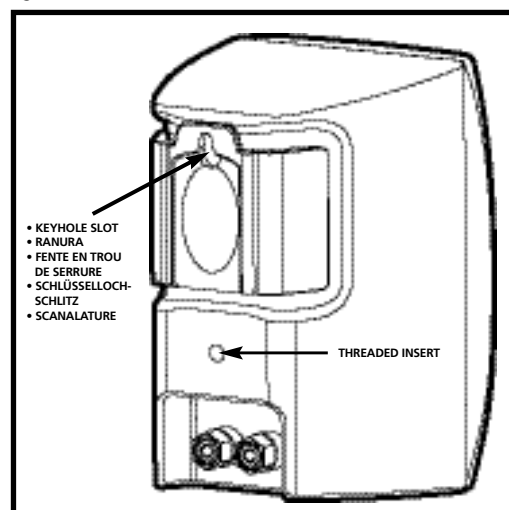


### Speaker Placement

 Figure B

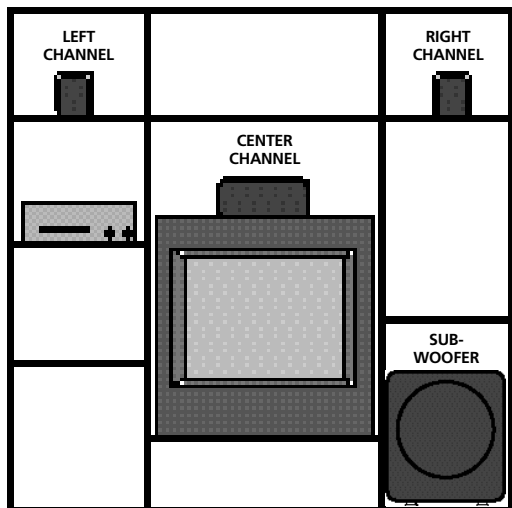


### Mounting Detail

 Figure D1

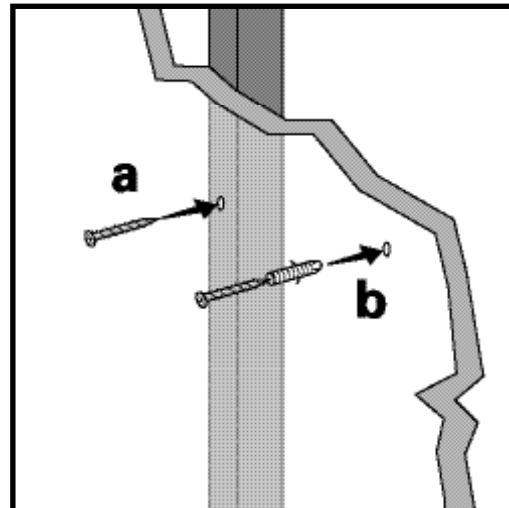


### Speaker Placement

 Figure C

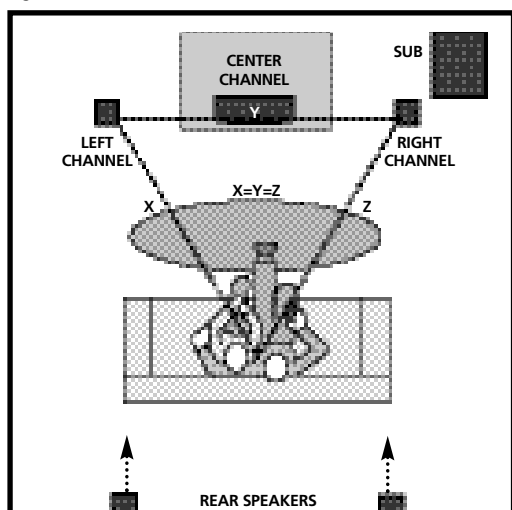

### Powered Subwoofer Low Pass Recommendation

 Figure E

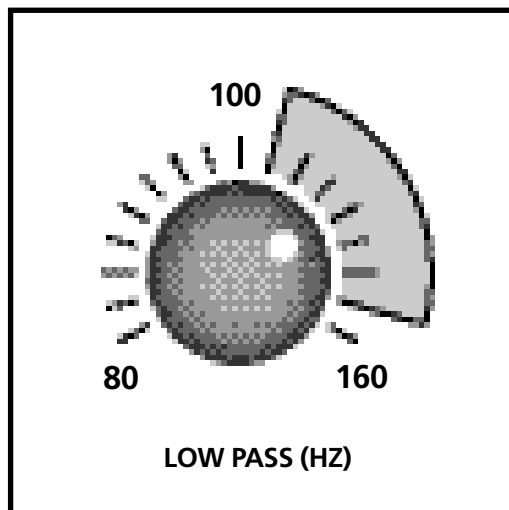

## **CONNECTING THE SPEAKERS TO THE SYSTEM (Figures G & H)**

Use two conductor 16 gauge or thicker audiophile grade speaker wires. Measure enough wire to reach from your receiver or amp to each speaker plus an additional 12" to allow moving the speakers or receiver without having to disconnect the wires. One of the terminals on the rear of the speaker is red (+) and the other black (-). Make certain that you connect the wire from the red (+) terminal of your amplifier to the red (+) terminal on your speaker, and the wire from the black (-) terminal of the amplifier to the black (-) terminal on your speaker. Most wire has some indication (such as color code, ribbing, or writing) on one of the two conductors to help maintain consistency. If your speakers sound "thin" with little bass and little to no center image, the chances are that one of the speaker wires is connected backwards. Double check all connections.

We recommend this system be used with a powered subwoofer (packaged separately) that has a built-in, adjustable low pass filter to separate the bass from the full range signal. The "subwoofer output" jacks (sometimes labeled "LFE") on most receivers also contain a fixed low pass filter. If you connect the subwoofer to the receiver's subwoofer output jack the two filters will interact and reduce the fidelity of your system. If you follow the hook up and the "receiver set up" instructions below, you will get all of the bass to the subwoofer and get the highest possible performance from your system. **DO NOT USE THE "SUBWOOFER OUTPUT" (LFE) JACK ON YOUR RECEIVER TO CONNECT THE SUBWOOFER.**

## **BEST HOOK UP METHOD (Figure G)**

- Connect the left and right front speaker outputs of your receiver or amplifier to the SPEAKER LEVEL INPUTS of the powered subwoofer.
- Connect the satellite speakers to the SPEAKER LEVEL OUTPUTS of the subwoofer.
- If it is more convenient, parallel wire the subwoofer and satellites from your receiver. (Figure H)
- Connect the center channel speaker directly to the center speaker output of your receiver or amplifier.
- Connect the surround satellites directly to the rear or surround channel outputs of your receiver or amplifier.

## **RECEIVER SET UP**

All surround sound receivers allow you to match the electronics to your speakers. Refer to the owners manual of your receiver or surround processor to learn how this is done. To get the best performance from the RM6700, use the following settings:

- Front Speakers - Set to "Large"
- Center Speaker - Set to "Normal" or "Small"
- Surround Speakers - Set to "Small"
- Subwoofer - Set to "Off" or "None." This setting may not make sense to you as your RM6700 system is used with a subwoofer, but really, this is the right setting.

## **ADJUSTING THE POWERED SUBWOOFER FOR BEST PERFORMANCE (RM6700 System With Optional Powered Subwoofer)**

- Start with the VOLUME level at about the 1 O'clock position. Adjust up or down until you get sufficient bass for your personal taste. Remember that room position can have a very large affect on perceived bass level.
- Turn the LOW PASS to the middle of the shaded area for best blending between the subwoofer and the satellites. You'll know the setting is correct when a high quality recorded male voice sounds full without any chestiness. If vocals sound thin turn this control up—if they sound boomy turn it down (See Figure E).

## **SAFE LIMITS OF OPERATION**

Your Polk loudspeakers are made with the highest quality materials for years of trouble-free performance. However, damage to loudspeakers can occur when an amplifier, regardless of its wattage, is made to play at higher listening levels than its power can clearly produce (usually beyond the "1 to 2 O'clock" position on the volume control).

This results in very high levels of audible distortion, originating in the amplifier, which adds a harsh, gritty sound to the music. Contrary to popular belief, a speaker is more likely to be damaged by trying to get too much volume from a low-powered amp or receiver than from a high-powered one. If you hear distortion, turn it down.

## **MAINTAINING THE APPEARANCE OF RM SERIES SPEAKERS**

Your new speaker cabinet is made of a rugged material that can be dusted or cleaned with a damp cloth. Avoid harsh detergents and cleaning fluids; they can permanently damage your speakers' finish. Gently vacuum the grilles to remove dust.

## **TECHNICAL ASSISTANCE OR SERVICE**

If, after following the hook-up directions, you experience difficulty, please double check all wire connections. Should you isolate the problem to the speaker, contact the authorized Polk Audio dealer where you made your purchase or call Polk Audio's Customer Service Department at 1-800-377-7655 (calls from US or Canada only) from 9am to 6pm, Eastern Time, Monday through Friday. You may also contact us via email [polks@polkaudio.com](mailto:polks@polkaudio.com).

Connecting speaker wires to the satellite and center speaker.


Conexión de los cables del altavoz al altavoz central y a los altavoces satélite.

Branchement des câbles de haut-parleurs aux satellites et à l'enceinte centrale.


Anschließen der Lautsprecherkabel an die Satelliten- und den Center-Lautsprecher.

Collegamento dei cavi satelliti e agili altoparlanti centrali.

 
Figure F

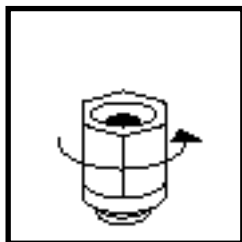

 Loosen hex nut.  
Afloje la tuerca hexagonal.  
Désserrez l'écrou hexagonal.  
Die Sechskantmutter lockern.  
Allentare il dado esagonale.

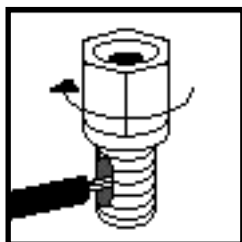

 Insert speaker wire through hole.  
Inserte el cable del altavoz a través del agujero.  
Insérez pas la partie isolée du fil.  
Das Lautsprecherkabel durch das Loch führen.  
Introdurre il cavo nel foro.

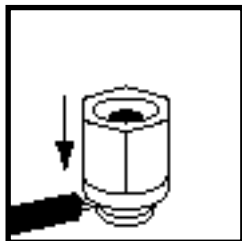

Tighten hex nut.  
Apretie la tuerca hexagonal.  
Serrez écrou hexagonal.  
Die sechskantmutter festziehen.  
Serrare il dado esagonale.



Do not insert insulated section of speaker wire.  
No inserte la sección aislada del cable altavoz.  
N'insérez pas la partie isolée du fil.  
Keinen isolierten Lautsprecherkabelabschnitt einführen.  
Non introdurre il tratto isolato del cavo.

**TO USE BANANA PLUGS (USA & CANADA ONLY): CAREFULLY PRY OUT THE BINDING POST PLUGS (PLASTIC PLUGS ON THE END OF THE BINDING POSTS) TO EXPOSE BANANA PLUG HOLES. INSERT BANANA PLUGS (THIS IS FOR USA & CANADA OWNERS ONLY).**

Best hook up method.


Método óptimo de conexión.

Meilleure méthode de branchement.

Bestes Anschlussverfahren.

Metodo migliore di collegamento.

 Figure G

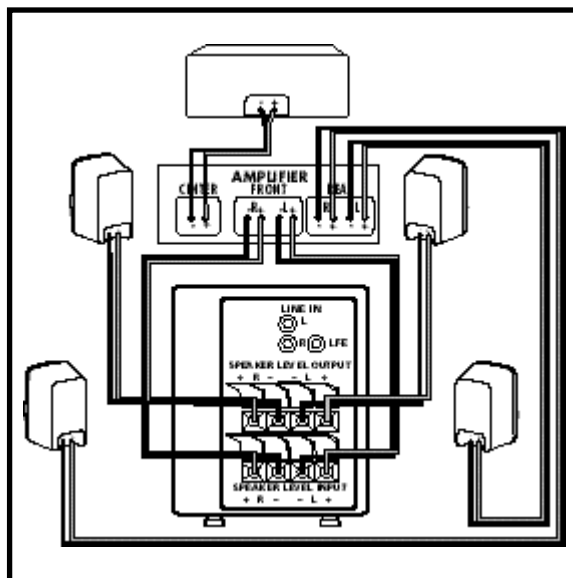

Optional hook up method.


Conexión alternativa.

Autre méthode de branchement.

Alternativer Anschluss.

Collegamento alternativo.

 Figure H

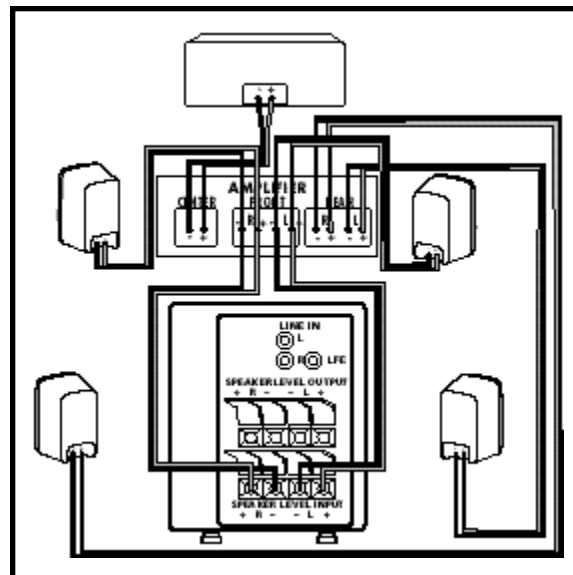

## SPECIFICATIONS

### RM6700 5-PACK SYSTEM

Shipping Weight (5-Pack):

23 lbs (10.5 kg)

### FRONT AND REAR SPEAKERS- RM2350

Overall frequency response:

95Hz-24kHz

-3dB limits:

130Hz-20kHz

Recommended Amplification:

20-125 Watts

Sensitivity:

89dB SPL @1m  
(2.83 Vrms drive level)

Impedance:

compatible with 8 ohm outputs

Bass-Mid Drive Unit:

1-3 1/4" (83mm)  
Dynamic Balance  
driver magnetically shielded,  
Polypropylene composite cone,  
rubber surround

Tweeter:

1- 3/4" (19mm) dome,  
self-shielded,  
Neodymium magnet,  
silk diaphragm

Crossover:

3.1kHz

Enclosure Type:

Vented, Power Port

Dimensions:

4 1/16"W x 6 1/2"H x 5"D  
(10.3cmW x 16.5cmH x 12.7cmD)

### CENTER CHANNEL-RM2650

Overall frequency response:

95Hz-24kHz

-3dB limits:

130Hz-20kHz

Recommended Amplification:

20-125 Watts

Sensitivity:

89dB SPL (2.83 Vrms drive level)

Impedance:

compatible with 8 ohm outputs

Bass-Mid Drive Unit:

2-3 1/4" (83mm)  
Dynamic Balance drivers,  
magnetically shielded,  
Polypropylene composite cone,  
rubber surround

Tweeter:

1-3/4" (19mm) dome,  
self-shielded,  
Neodymium magnet,  
silk diaphragm

Crossover:

3.1kHz

Enclosure Type:

Vented, Power Port

Dimensions:

11 3/16"W x 4 5/16"H x 5 3/16"D  
(28.4cmW x 10.9cm H x 13.1cm D)

*Specifications subject to  
change without notice.*

## POLK AUDIO LIMITED WARRANTY

Polk Audio, Inc., warrants to the original retail purchaser only. This warranty will terminate automatically prior to its stated expiration if the original retail purchaser sells or transfers the Product to any other party.

Polk Audio, Inc., warrants, to the original retail purchaser only, that the LOUDSPEAKER(S), PASSIVE CROSSOVER COMPONENT(S) and ENCLOSURE on this Polk Audio Loudspeaker Product will be free from defects in material and workmanship for a period of five (5) years from the date of original retail purchase from a Polk Audio Authorized Dealer.

Furthermore, Polk Audio, Inc., warrants, to the original retail purchaser only, that any AMPLIFIER OR OTHER ELECTRONIC COMPONENT that may be included in this Polk Audio Loudspeaker Product will be free from defects in material and workmanship for a period of three (3) years from the date of original retail purchase from a Polk Audio Authorized Dealer.

To allow Polk Audio to offer the best possible warranty service, please fill out the Product Registration Card(s) and send it to the Factory at the address provided on the Product Registration Card(s) within ten (10) days of the date of original purchase.

Defective Products must be shipped, together with proof of purchase, prepaid insured to the Polk Audio Authorized Dealer from whom you purchased the Product, or to the Factory at 2550 Britannia Boulevard, Suite D, San Diego, California 92154. Products must be shipped in the original shipping container or its equivalent; in any case the risk of loss or damage in transit is to be borne by you. If upon examination at the Factory or Polk Audio Authorized Dealer it is determined that the unit was defective in materials or workmanship at any time during this Warranty period, Polk Audio or the Polk Audio Authorized Dealer will, at its option, repair or replace this Product at no additional charge, except as set forth below. All replaced parts and Products become the property of Polk Audio. Products replaced or repaired under this warranty will be returned to you, within a reasonable time, freight prepaid.

This warranty does not include service or parts to repair damage caused by accident, disaster, misuse, abuse, negligence, inadequate packing or shipping procedures, commercial use, voltage inputs in excess of the rated maximum of the unit, cosmetic appearance of cabinetry not directly attributable to defect in materials or workmanship, or service, repair, or modification of the Product which has not been authorized or approved by Polk Audio. This warranty shall terminate if the Serial number on the Product has been removed, tampered with or defaced.

This warranty is in lieu of all other expressed Warranties. If this Product is defective in materials or workmanship as warranted above, your sole remedy shall be repair or replacement as provided above. In no event will Polk Audio, Inc. be liable to you for any incidental or consequential damages arising out of the use or inability to use the Product, even if Polk Audio, Inc. or a Polk Audio Authorized Dealer has been advised of the possibility of such damages, or for any claim by any other party. Some states do not allow the exclusion or limitation of consequential damages, so the above limitation and exclusion may not apply to you.

All implied warranties on this Product are limited to the duration of this expressed Warranty. Some states do not allow limitation on how long an implied Warranty lasts, so the above limitations may not apply to you. This Warranty gives you specific legal rights, and you also may have other rights which vary from state to state.

This Warranty applies only to Products purchased in the United States of America, its possessions, and U.S. and NATO armed forces exchanges and audio clubs.

The Warranty terms and conditions applicable to Products purchased in other countries are available from the Polk Audio Authorized Distributors in such countries.

*"Polk Audio" and "The Speaker Specialists" are trademarks of Britannia Investment Corporation  
used under license by Polk Audio Incorporated.*

**polkaudio**  
the speaker specialists®

 
Polk Audio  
5601 Metro Drive  
Baltimore, Maryland 21215  
(800) 377-7655





# Top of Speaker

**Template for Wall Mounting  
the RM2650 Center Channel**

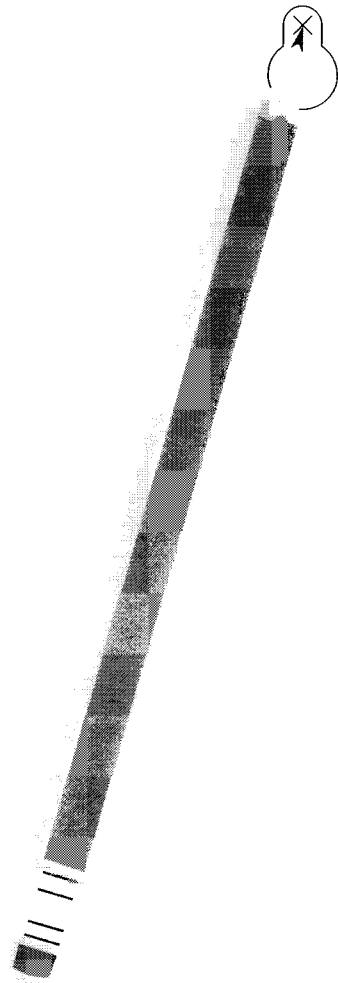

# REGISTER Online

It's faster...easier...and you get **COOL** stuff!

## Register on-line to get:

- An entry into a **monthly drawing** for a **free** Polk subwoofer (home or car, your choice).
- The **peace of mind** that we have a record of your purchase to verify purchase date and warranty status.
- **Privacy.** The data we gather on our on-line registration is never sold or otherwise shared with anyone.
- **Free membership in Club Polk.** Club Polk members enjoy valuable services and benefits not available to the general public.
- A **free subscription** to Polk's newspaper *The Speaker Specialist*, to help you get better performance and more enjoyment from your audio system.

[www.polkaudio.com/home/registration](http://www.polkaudio.com/home/registration)



Thank you for purchasing

**polkaudio**  
the speaker specialists®

Please send other correspondence to:



Polk Audio, Inc.  
5601 Metro Drive  
Baltimore, MD 21215  
129 E

NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES



**BUSINESS REPLY MAIL**  
FIRST-CLASS MAIL PERMIT NO. 18230 BALTIMORE, MD

POSTAGE WILL BE PAID BY ADDRESSEE

**polkaudio**  
the speaker specialists®  
**PRODUCT REGISTRATION DEPARTMENT**  
**5601 METRO DRIVE**  
**BALTIMORE MD 21215-9956**



RM 0296-1

**PRODUCT REGISTRATION CARD**

**polkaudio**  
the speaker specialists®

By completing and returning the attached  
Product Registration Card you will:

- **CONFIRM YOUR WARRANTY**
- **REGISTER YOUR PRODUCT**
- **PROTECT YOUR NEW PRODUCT**

# RETURN THIS CARD TODAY AND RECEIVE THESE 3 IMPORTANT BENEFITS:



## WARRANTY CONFIRMATION:

Your prompt product registration confirms your right to the protection available under the terms and conditions of your Polk Audio warranty.



## PRODUCT PROTECTION:

We will keep the model number and date of purchase of your speakers on file in the event of an insurance claim such as theft or loss.



## PRODUCT REGISTRATION:

Returning this card is your only way to guarantee that you will be notified by Polk Audio of any issues that arise concerning this product.

PLEASE DETACH HERE BEFORE MAILING.

**polkaudio**  
the speaker specialists®

Thank you for your purchase. We at Polk Audio feel you are the most important person in our company. Your feedback will help us in our ongoing efforts to produce the finest and most satisfying loudspeaker available.

129 E

1 First Name:

Initial:

Last Name:

Address: (Number and Street)

Apt #:

City:

State:

Zip Code:

2 Phone #:

3 E-mail Address:

If you voluntarily provide us with your email address, you give us permission to share and use your email address to send you email offers that may interest you.

(EXAMPLE: yourname@yourhost.com)

4 Date of Purchase:

Month

Day

Year

6 Store Name:

5 Serial Number:

RM2650 07079

7 Who installed this product?

1. ☐ Self

2. ☐ Professional

3. ☐ Friend / Relative

8 Did the following reasons influence your purchase of this Polk Audio product?

1. Polk Audio Reputation

Yes

No

2. Ease of Use

3. Appearance

4. Recommendation of Dealer

5. Recommendation of Family/Friend

6. Magazine Review

7. Quality of Sound

8. Technical Specifications

9. Value for Price

10. Prior Experience with Polk Audio

9 Where have you seen Polk products featured? (Check all that apply)

1. ☐ Magazine advertisement

2. ☐ Polk literature

3. ☐ Magazine review

4. ☐ In-store advertising

5. ☐ Someone else's home or car

6. ☐ On-line computer bulletins

10 What other brands did you consider? (Check all that apply)

1. ☐ No other brands

2. ☐ Acoustic Research

3. ☐ Advent

4. ☐ B&W

5. ☐ Bose

6. ☐ Boston Acoustics

7. ☐ Cambridge Soundworks

8. ☐ Cerwin-Vega

9. ☐ Definitive Technology

10. ☐ Eosone

11. ☐ Infinity

12. ☐ JBL

13. ☐ KEF

14. ☐ Klipsch

15. ☐ M&K

16. ☐ Mirage

17. ☐ NHT

18. ☐ Paradigm

19. ☐ Phase Technology

20. ☐ Radio Shack

21. ☐ Sonance

22. ☐ Velodyne

23. ☐ Yamaha

24. ☐ Other

11 Your gender: 1. ☐ Male 2. ☐ Female

12 Your marital status: 1. ☐ Married 2. ☐ Single

13 Date of your birth:

Month

Day

Year

14 Including yourself, what is the total number of people living in your household?

(Examples: 01, 02, 03, 04...)

15 Date of birth (month/year) of the other adults and children in your household:

Male Female

1. ☐ 2. ☐

Month Year

Male Female

1. ☐ 2. ☐

Month Year

1. ☐ 2. ☐

Month Year

1. ☐ 2. ☐

Month Year

16 For your primary residence, do you:

1. ☐ Own 2. ☐ Rent

17 Which best describes your family income?

1. ☐ Under \$15,000

2. ☐ \$15,000-\$24,999

3. ☐ \$25,000-\$34,999

4. ☐ \$35,000-\$49,999

5. ☐ \$50,000-\$74,999

6. ☐ \$75,000-\$99,999

7. ☐ \$100,000-\$124,999

8. ☐ \$125,000-\$149,999

9. ☐ \$150,000-\$174,999

10. ☐ \$175,000-\$199,999

11. ☐ \$200,000-\$249,999

12. ☐ \$250,000 or over

18 Education:

(Please check which category applies to you):

1. ☐ Some high school

2. ☐ Completed high school

3. ☐ College degree

4. ☐ Graduate degree

19 In the last six (6) months has anyone in your household purchased any of the following items through the mail and/or over the internet?

A. Mail B. Internet

1. Books/magazines

2. Children's products

3. Clothes

4. Insurance/financial products

5. Music/video/DVD

6. Travel

7. Other

☐

☐

☐

☐

☐

☐

☐

20 I use these credit cards:

1. ☐ American Express

2. ☐ Gas/Retail

3. ☐ Master Card

4. ☐ Visa

5. ☐ Other

6. ☐ Do not have credit cards

21 Someone in my home participates in the following activities: (Check all that apply)

1. ☐ Automotive work

2. ☐ Bible/devotional

3. ☐ Boating/sailing

4. ☐ Camping/hiking

5. ☐ Casino gambling

6. ☐ Contribute to charitable causes

7. ☐ Crafts

8. ☐ Cultural art/events

9. ☐ Cycling

10. ☐ Do-it-yourself

11. ☐ Enter sweepstakes/contests

12. ☐ Fishing

13. ☐ Fitness/exercise/jogging

14. ☐ Gardening

15. ☐ Golf

16. ☐ Gourmet cooking/food/wines

17. ☐ Grandchildren

18. ☐ Home decorating

19. ☐ Hunting/Shooting

20. ☐ Investments (mutual funds, IRAs)

21. ☐ Investments (stocks & bonds)

22. ☐ Movie watching

23. ☐ Own a cat

24. ☐ Own a dog

25. ☐ Personal computing / internet

26. ☐ Photography

27. ☐ Read books

28. ☐ Snow skiing

29. ☐ Self improvement

30. ☐ Soccer

31. ☐ Tennis

32. ☐ Travel-Foreign

33. ☐ Travel-U.S

34. ☐ TV shopping

35. ☐ Vitamins/natural foods

36. ☐ Watch sports on TV

COMMENTS: